


JetHand Dryer-AK2070

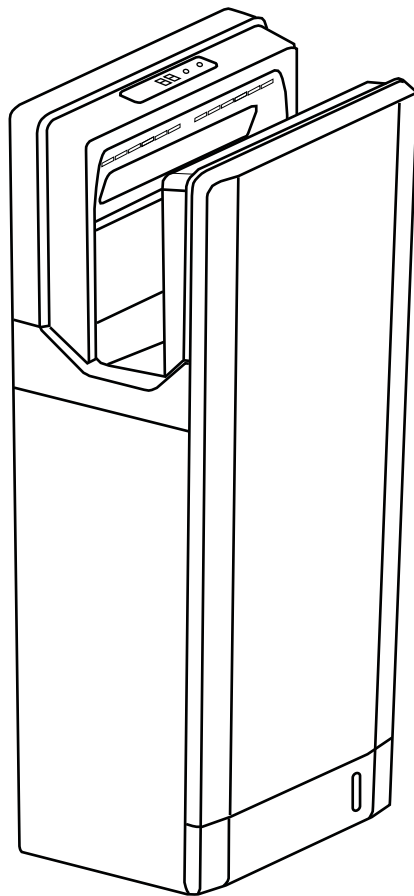

Features



- Dual sides jet air enable fast dry hands in 7-10s
- 24,000 RPM brushless motor, stable and eco, with lower noise, and up to 10 years life time
- HEPA Filter and UV light to kill bacteria in air flow on hands
- Removable drain tank, keep the ground clean
- Intelligent LED display drying time and error code
- Adjustable stepless air speed switch allow to adjust high/low air speed and intelligent temperature control system

Customize your dryers' temperature:

1. Turn on the intelligent heat system. When the room temperature is higher than 25 °C, AK2006H blows normal temperature air (700W). When the room temperature is below 25 °C, It blows warm air (1850W)
2. Turn off the intelligent heat system. It blows normal temperature air (700W).
3. Turn on the intelligent heat system. Remove the temperature sensor(Explanation in the instructions), It always blows warm air (1850W).

Anti-damage timer

Installed anti-damage timer, this machine will stop work after working 25 seconds. Draw out your hands and put again your hands into the dryer to continue use.

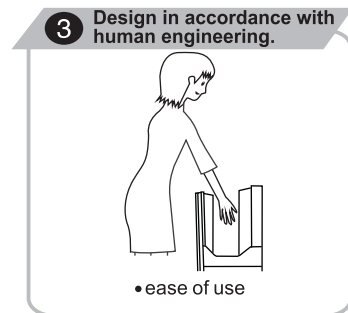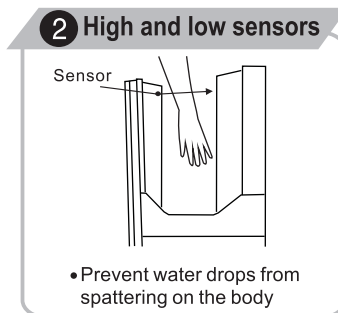

SPECIFICATIONS

ELECTRICAL

VOLTS	WATTS	NO HEAT WATTS	HERTZ	MOTOR
100-130V/220-240V	1650-2050W	650-850W	50/60 Hz	Brushless DC Motor

DIMENSIONS

Height 655mm(25.8") Width 305 mm(12") Depth 200mm(7.9")

ACTIVATION

Automatic Sensor Operated


MOUNTING

Surface Mounted


WEIGHT

9.2kg (20.3lbs)


Parts name and dimension drawing

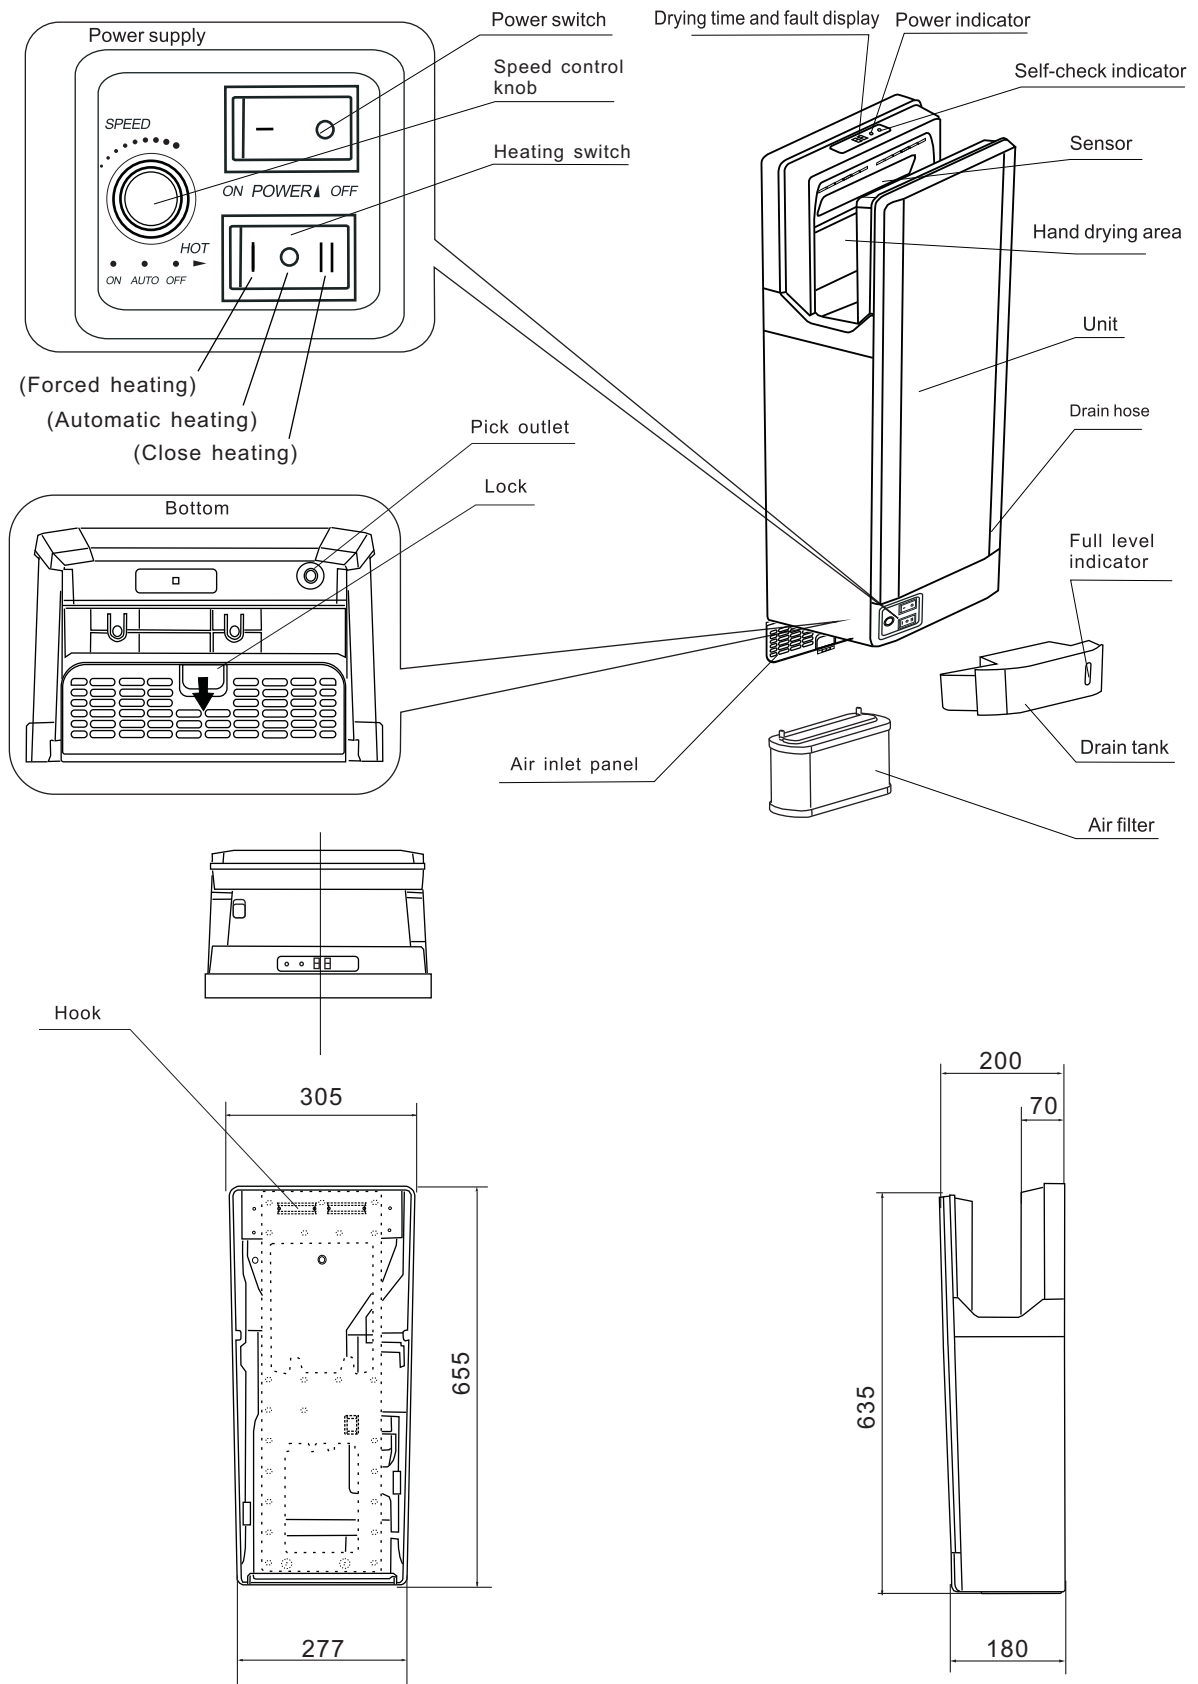


■ Using the Unit

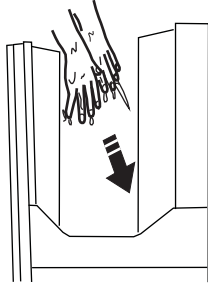

- Stretch out both hands and insert them all the way in. The unit starts to run automatically.

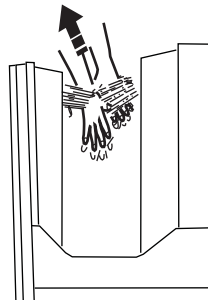

- Pull them out slowly, letting the air blow the water off.

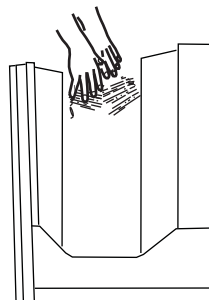

- Pull them out completely.

Usage Label



Stick the usage label on the visible place (the front of the unit or the wall nearby).

◆ When using the unit

Turn on the power switch.

- The lamp lights up.
- Power indicator lights up.


Trouble shooting、electrical schematic

If you discover the following circumstance, please inspection and handling as following:

Problem	Check	Action
No air blows even if hands are inserted	Do the display indicators lights up? Is the power switch on? Are you putting your hands all the way in?	<ul style="list-style-type: none"> • Turn the ground-fault circuit breaker on. • Turn the power switch on. • Put hands all the way in .
Machine works long time after hands drawn out, finally shows E2	<ul style="list-style-type: none"> • Any dirt or foreign body on sensor? 	<ul style="list-style-type: none"> • Switch off the power button, and then remove dirt or foreign body on sensor after the power light gone out. When finished, switch on power button.
No hot wind	<ul style="list-style-type: none"> • There is a Built-in heater in the unit. Any dirt on heating sensor? 	<ul style="list-style-type: none"> • Is the ambient temperature higher than 25°C?
Airflow is too low	<ul style="list-style-type: none"> • Is the speed control knob on low level? 	<ul style="list-style-type: none"> • Rotational speed control knob on the high level, clockwise rotation wind speed increase, counter-clockwise wind speed lowered

If the above actions do not work, turn off the power and the ground-fault circuit breaker, and call your dealer to inspect and repair it if necessary. (Costs are as per agreement with the dealer)

Electrical schematic

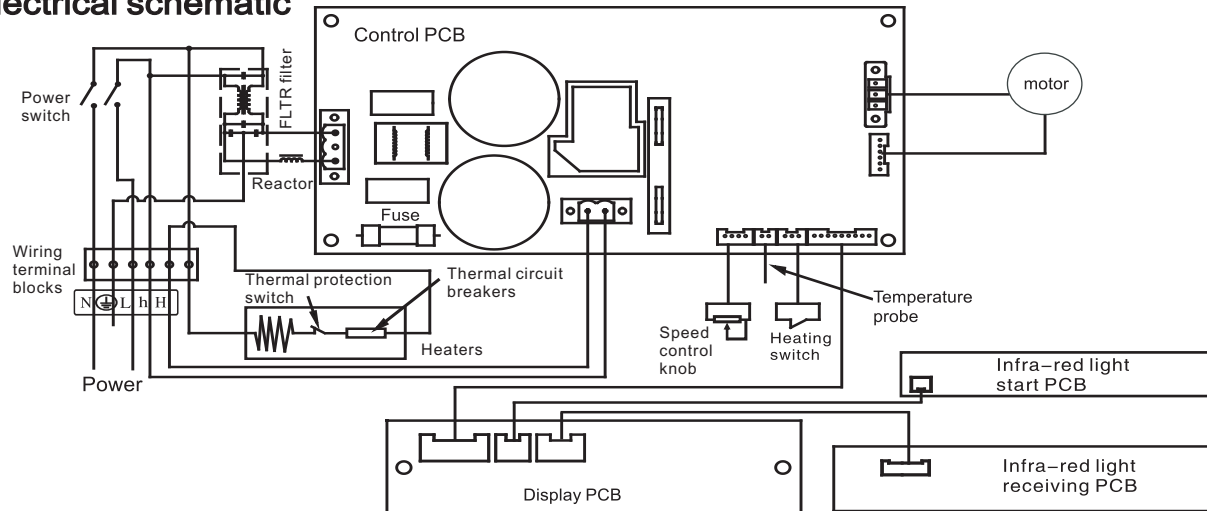

	Status	Introductions	Status	Introductions	Solution
Power indicator light	Light	Power input normally	Extinguish	Power not supply	Check the external power source, close the power switch
				Master board fuse blew out	
State indicator light	Extinguish	Don't work	Flashing light	Motor fault, it can't start normally	Check motor connecting wires and the rotor foreign material
	always light	Working		Trick or working time longer than 25s	
Timing digital tube	Digital changes	Countdown work	Jump display	Indicate drying time finished	
	E1	Motor fault, it can't start normally			Check the fan sensor connection is loose?
	E2	Trick or working time longer than 25 seconds			Clear workspace foreign material, restart to work
	E3	The voltage exceeds 15%			Check the power supply circuit
	E5	Machine temperatures higher than 80°C	E6	Master board temperatures higher than 80°C	Clear the foreign material of the air inlet and air outlet



WARNING

personal injury accidents will happen if use improperly



Prohibited



Do not use in the bathtub or shower room



Do not allow The unit get wet



Prohibit disassembling



 
Please do complying with instruction



Ground



WARNING



- Do not open the front panel . otherwise, This may get an electric shock
- Children forbidden hanging on the machine, there are risk of falling.
- Do not use in a wet environment,for example,near the bathroom where it may get the direct water and the places where the condensation may form.otherwise,this may cause electric shock and unit malfunction.
- Do not allow the unit get wet.otherwise, it will cause electric shock
- Do not modify and disassemble the unit unnecessarily. Otherwise,this may cause a fire,electric shock,or personal injury.
- Rated power is required.
- If power tolerance is over +/-10%, there will be breakdown If using incorrect power supply, fire, electric shock and machine malfunction will happen.
- Please use dedicated socket If using together with other appliances, the socket may cause abnormal heat leading to fire.
- Power must be cut off when maintenance to prevent the risk of electric shock.
- Drain tank and air filter must be installed. Do not switch on after power connected for 10 seconds.
- If the machine doesn't work or have abnormal conditions, please cut off power to prevent accidents; and close leakage circuit breaker and ask supplier to check and repair, or it may lead to fire because of electricity leakage and short circuit
- It must have the reliable grounding wire otherwise it may cause electric shock risk when the unit failure or leakage
- Attention when installation: Do not install when the machine are power connected.
- It must operated by the professional construction person when install the unit If the construction incorrect, it may cause electric shock and fire accident
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. ask your installer for advice.
- Please make sure the unit is equipped with HEPA during use, otherwise it will influence the service life of motor and main control board.
- **Environmental Protection** Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

